



Installation Instruction

AC2065 – ALO Conversion Harness

You will need:

- Wrench 11/16"



- Grinder or metal saw

(Only if you use the spacer bushings)



1. Remove the 4 main harness pins by removing the 4 bolts holding them in place using the 7/16" wrench.



2. Put the harness in place. Use your tractor's hydraulics as needed to line up the holes.



AGRI-CAN ™


3. Replace the 4 cotter pins (pin) but do not put the bolts on!



4. **If there is slack** between your loader arms and the harness, trim the bushing spacers to ensure your loader arms do not move side to side in the bracket. This will ensure proper operation of the harness without lateral movement of the clip.



5. Put the 4 pins, bolts and washers back in place, making sure to tighten the bolts well but not excessively.

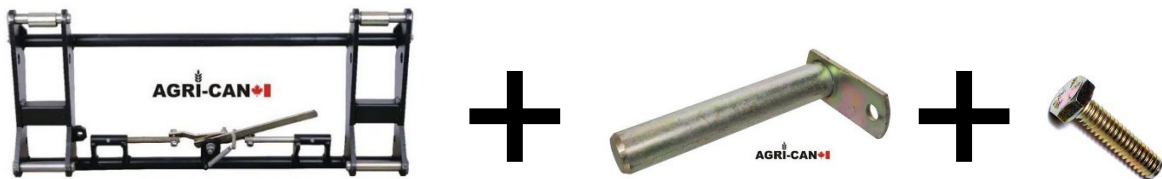

And There you go! It's that simple. Installation only takes about 5-10 minutes.